


STAR WARS™

HAN SOLO'S™ MILLENNIUM™ FALCON™

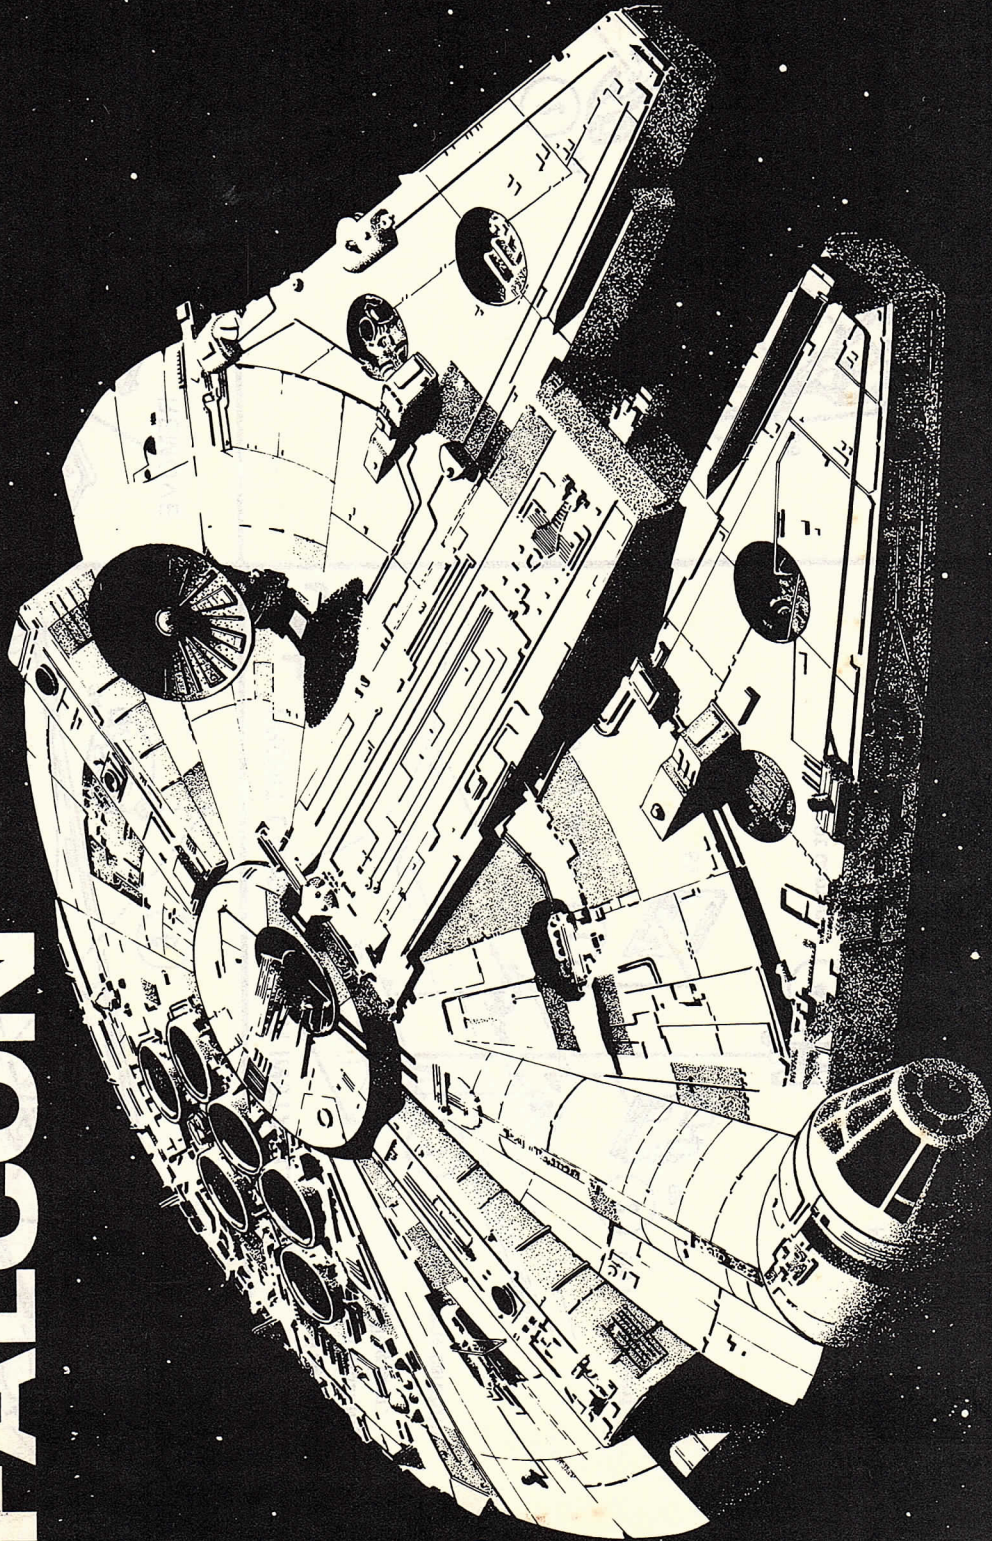

mpe
78 - 1925 - 250

IMPORTANT! READ THESE INSTRUCTIONS FIRST

Before you begin building your kit read the instructions completely and carefully. Study all the illustrations and the placement of each part. When assembling the kit test fit each part before cementing. This is a large kit with many interlocking parts. Perfect fits can be achieved, if all parts are in their correct places. It is best to cut the parts from their "runners" with a modelers knife instead of twisting them off. Cut the parts only as they're needed. Only paint and cement for styrene plastic should be used. Be sure to trim off excess plastic or "flash". Cement should be applied to small parts with a toothpick. Each part is numbered. Placement for the part is sometimes numbered to correspond to the part.

STEP NUMBERS

10

PART NUMBERS

37

CEMENT



DO NOT CEMENT




CLEAR
PLASTIC PARTS

CLEAR

Two "C" size batteries
required.


LOCATING PINS

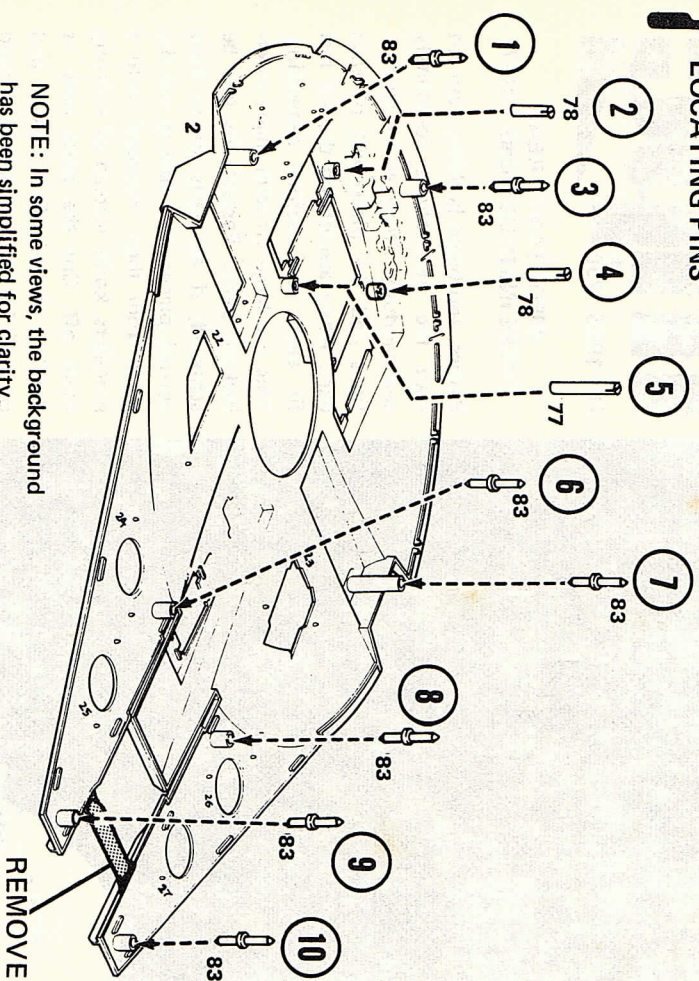

NOTE: In some views, the background has been simplified for clarity.


3a

FRONT LANDING GEAR ASSEMBLY

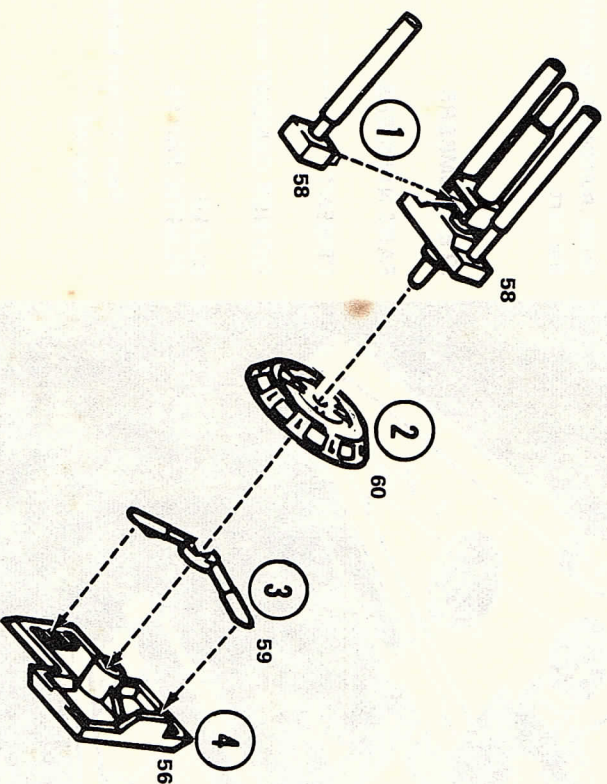


2

INSERTS (BOTTOM HALF)

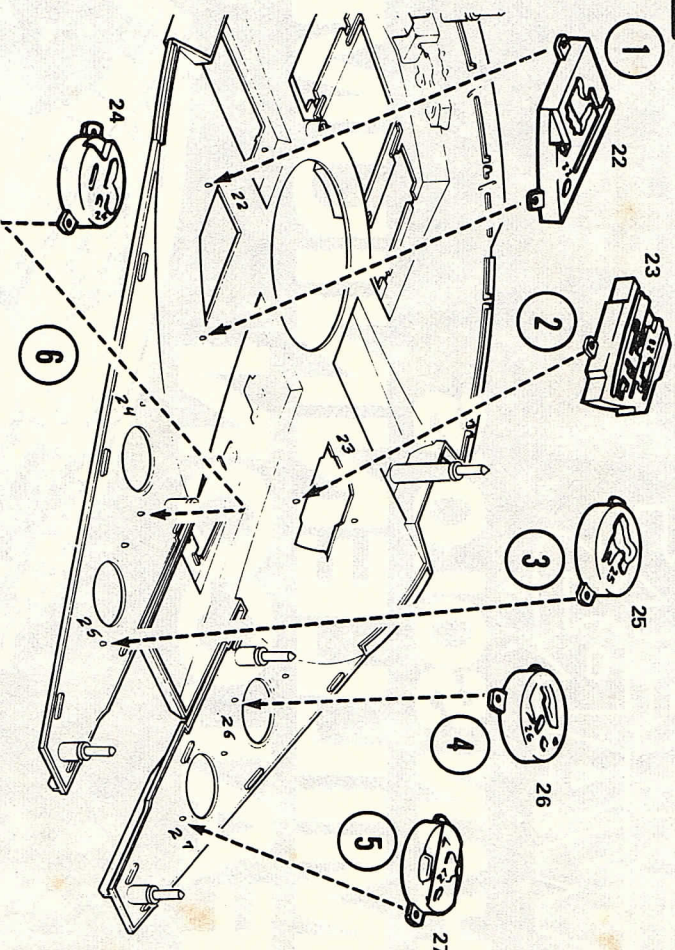

3b


FRONT LANDING GEAR INSTALLATION

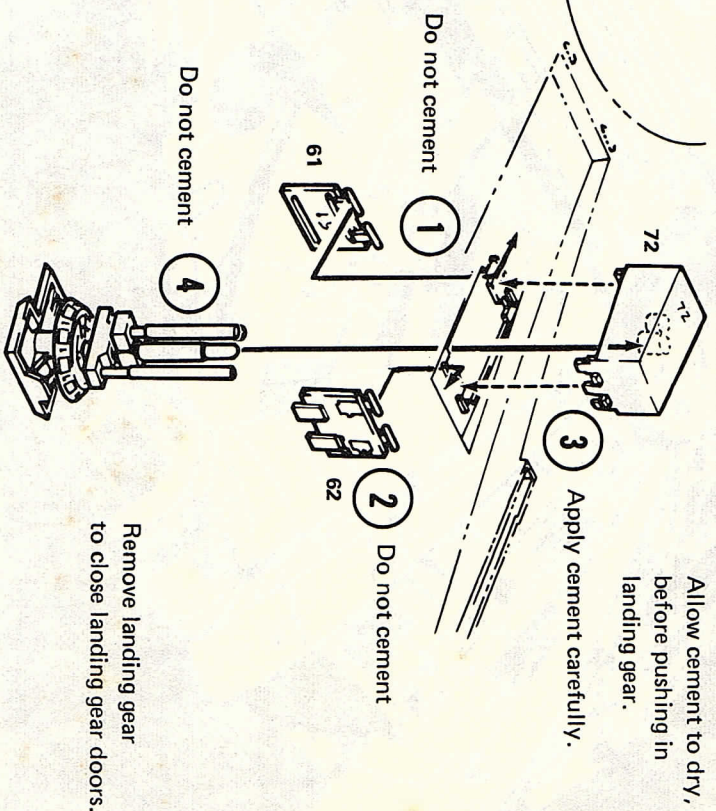


Allow cement to dry, before pushing in landing gear.

Remove landing gear to close landing gear doors.


REAR LANDING GEAR ASSEMBLY

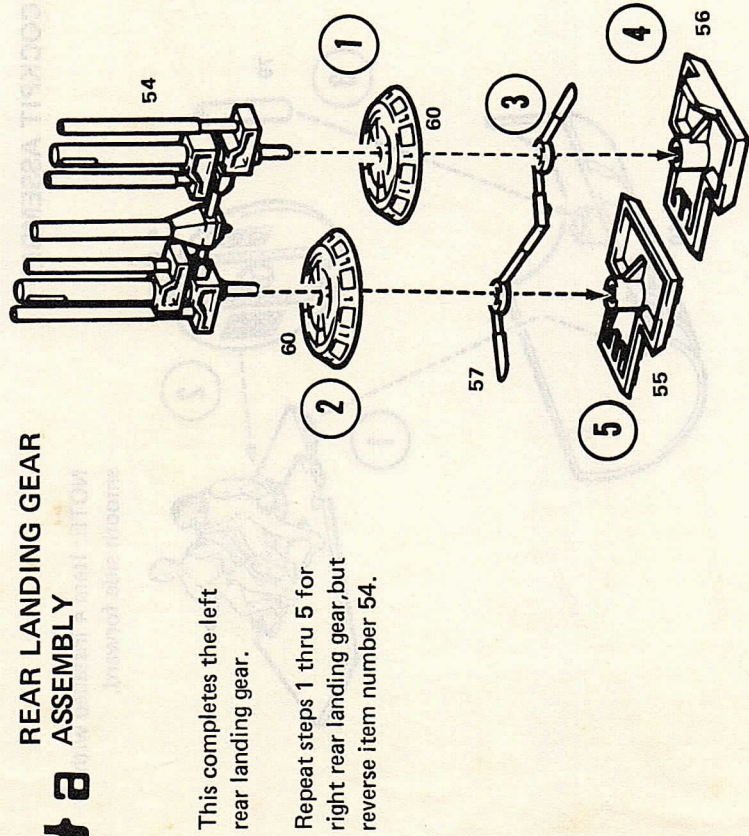


REAR LANDING GEAR INSTALLATION

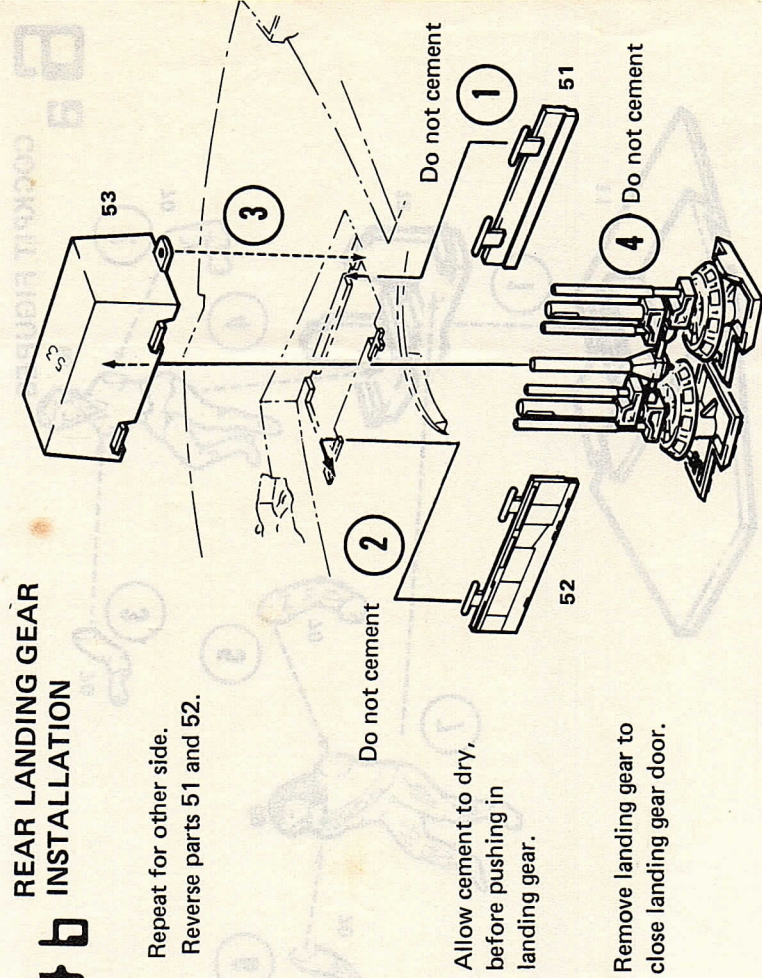

LASER GUN ASSEMBLY

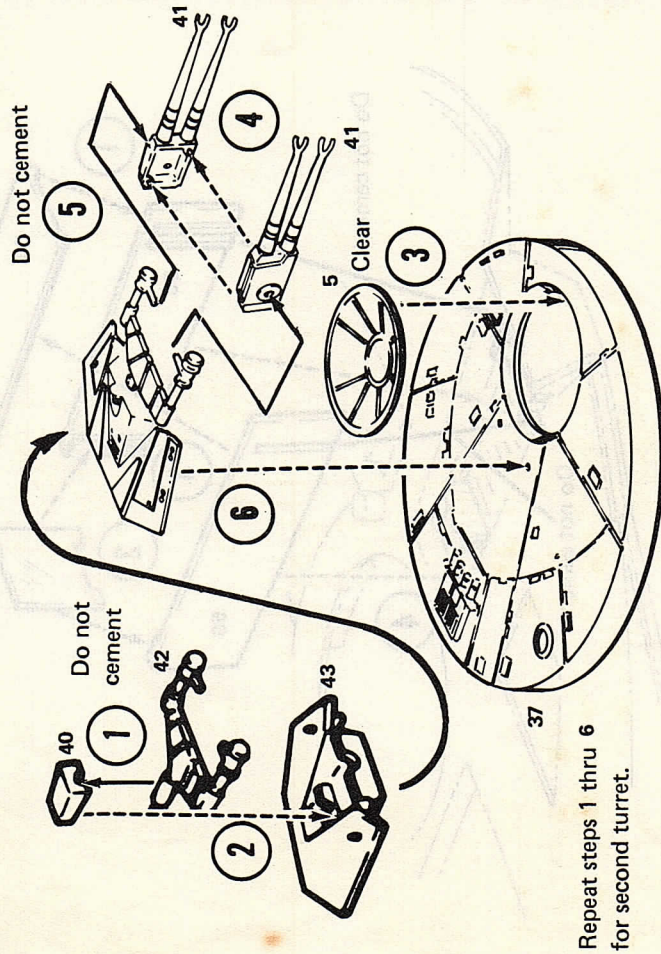


LASER GUN INSTALLATION

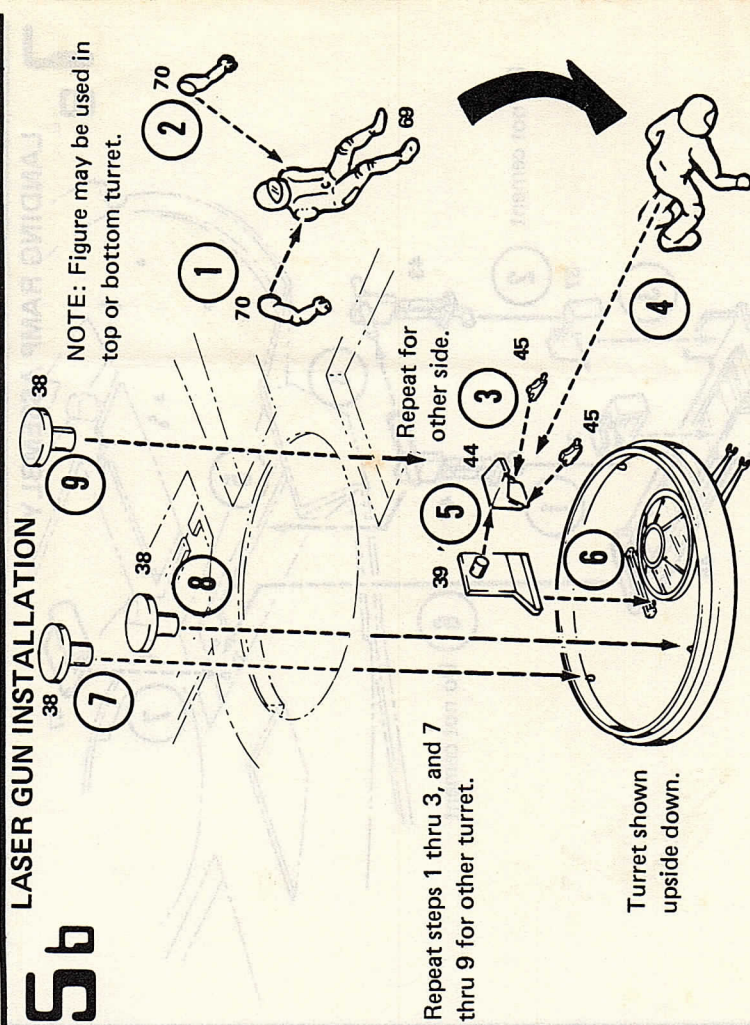


6a

COCKPIT FIGURES

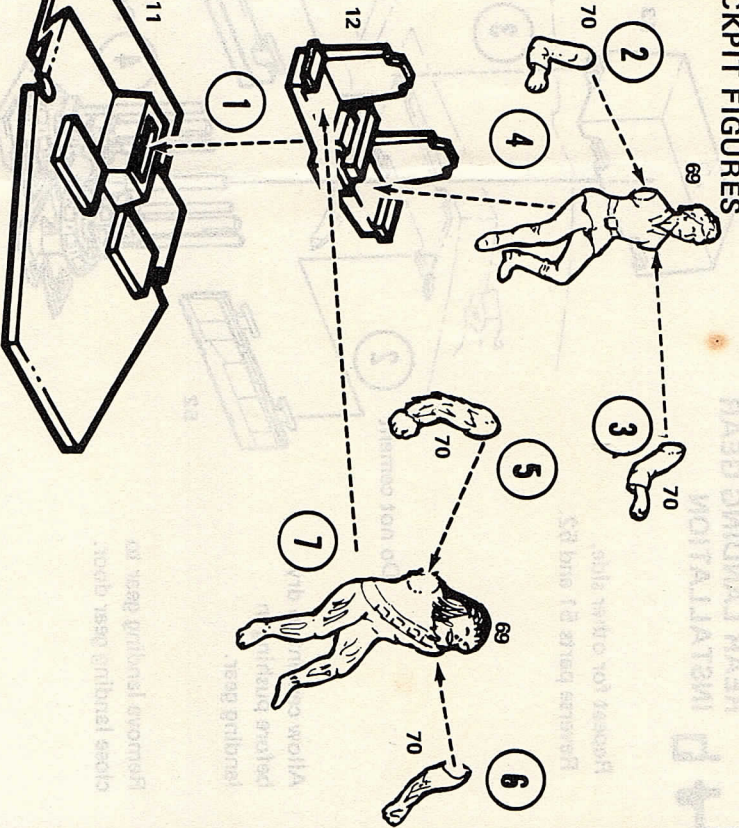

6b


COCKPIT ASSEMBLY

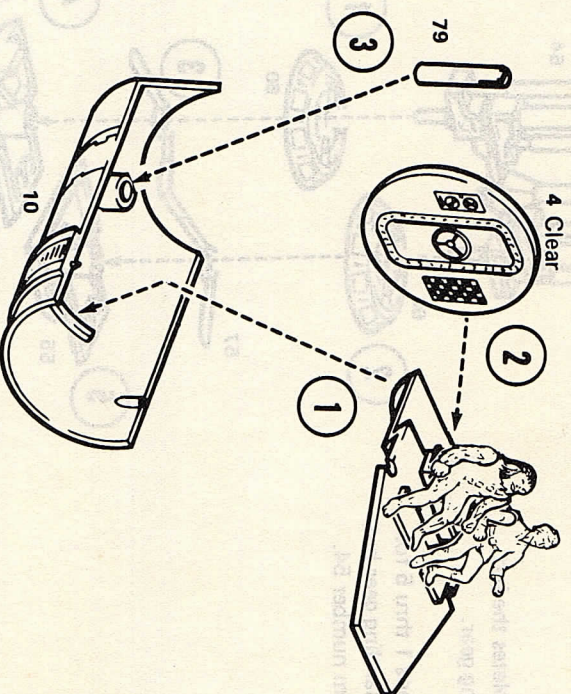

NOTE: Item 4 installed with smooth side forward.


7a


LANDING RAMP ASSEMBLY

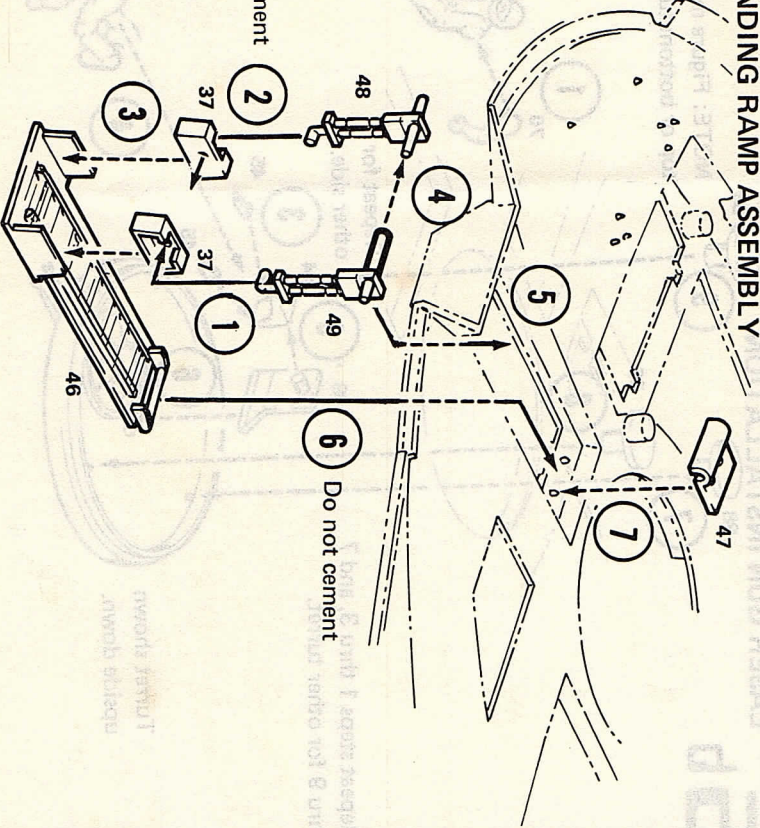

7b


LANDING RAMP INSTALLATION

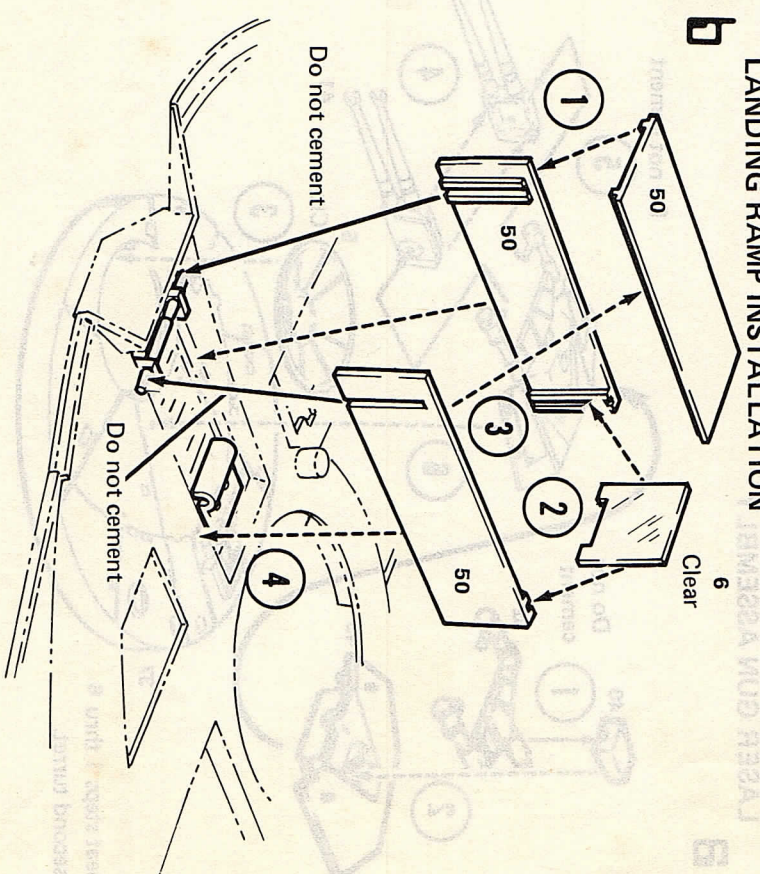

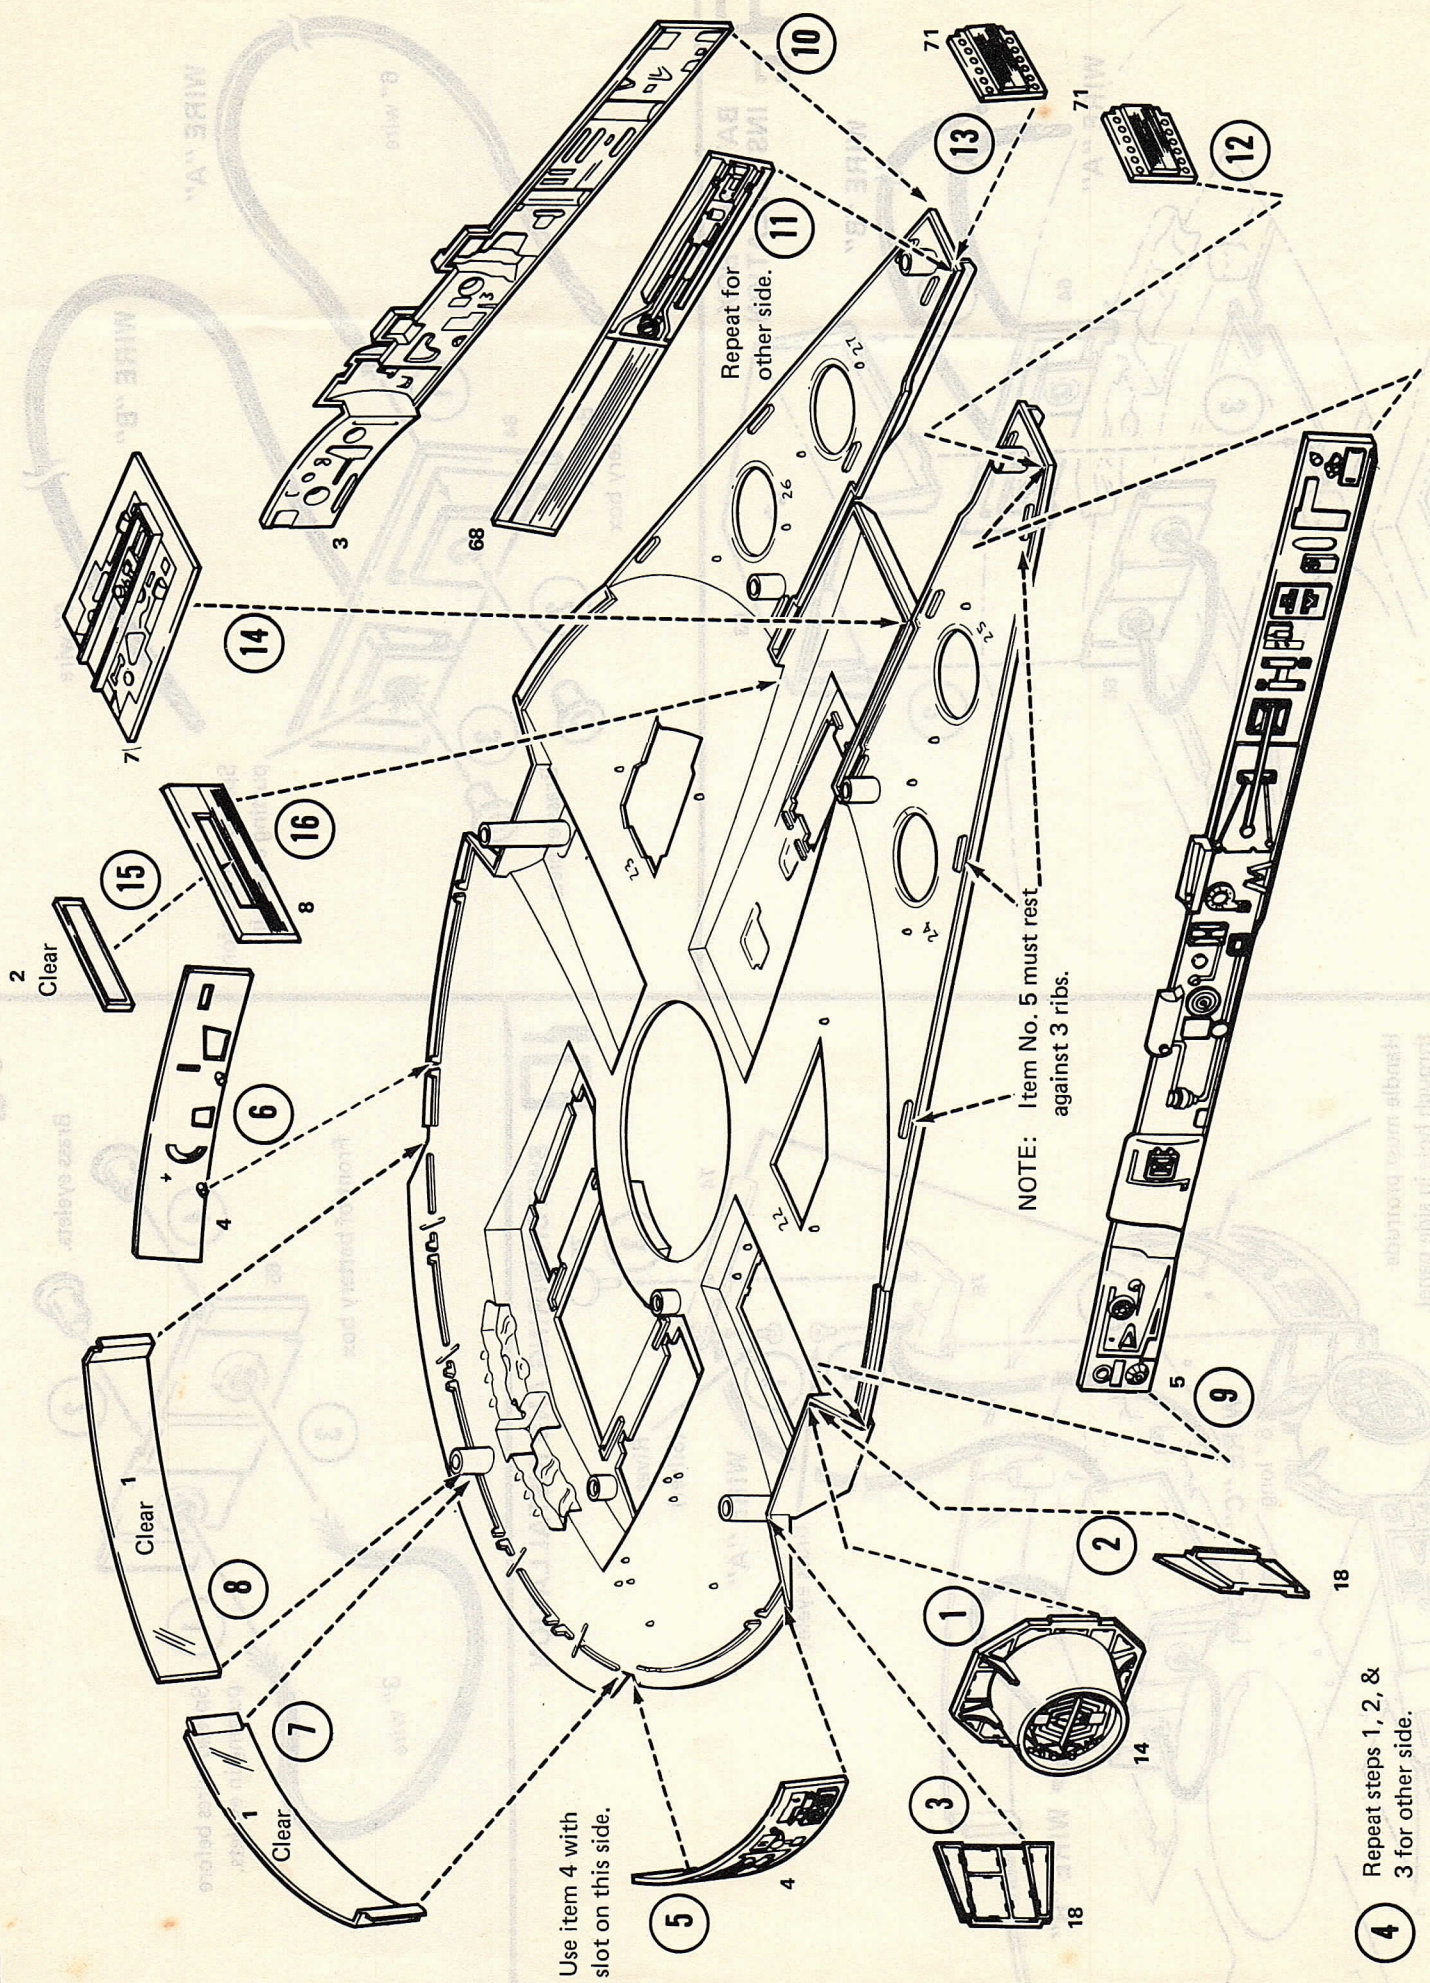


4 Repeat steps 1, 2, & 3 for other side.


9a BATTERY BOX WIRING

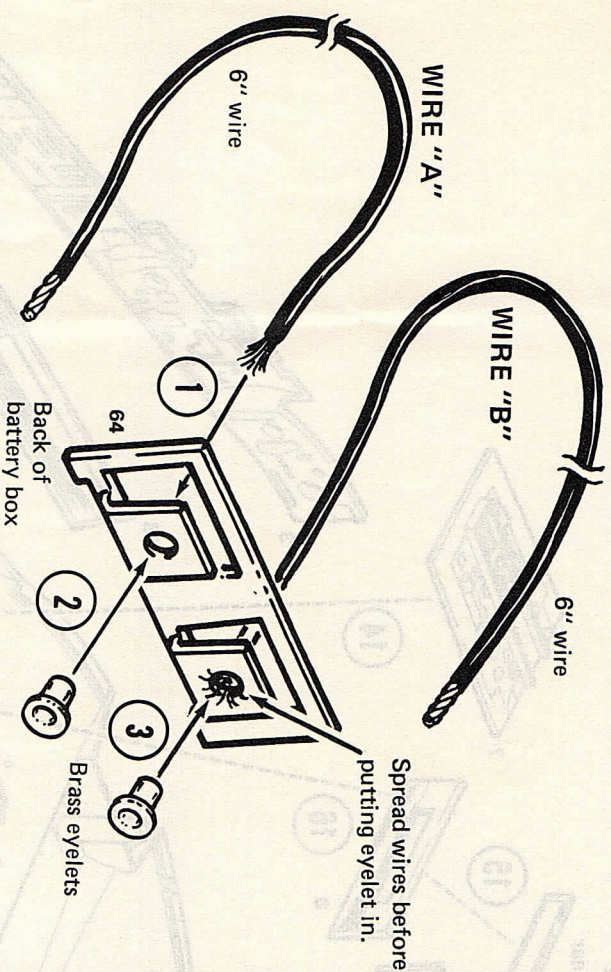


9c BATTERY BOX INSTALLATION

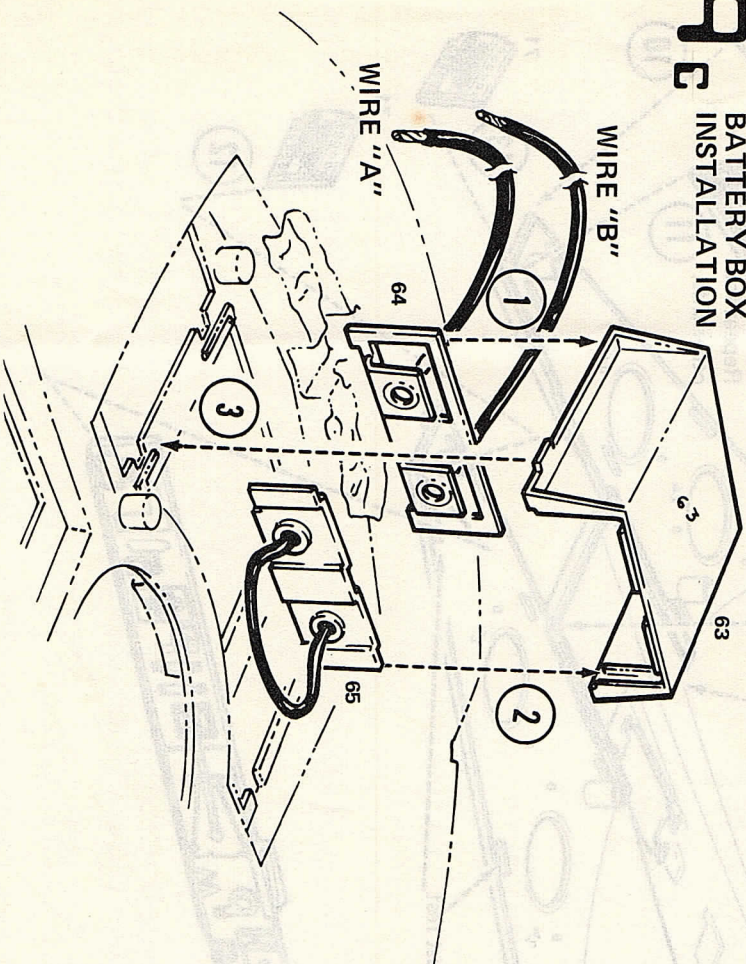


9b BATTERY BOX WIRING

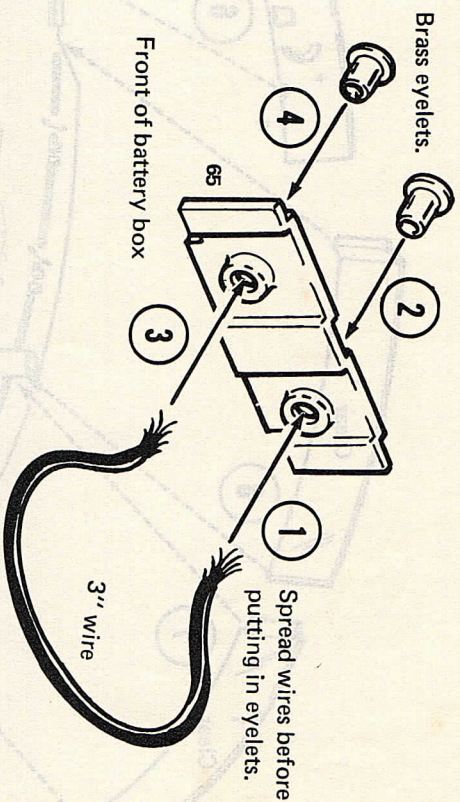


10 SWITCH WIRING AND INSTALLATION

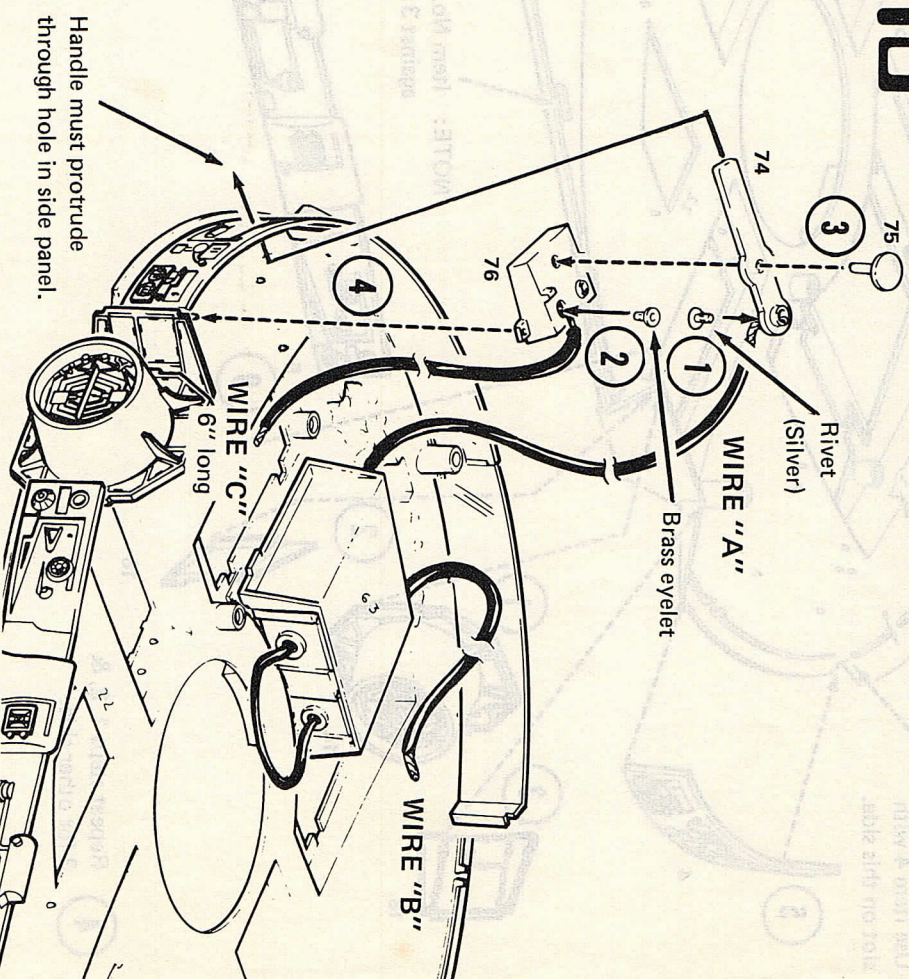


LAMP HARNESS

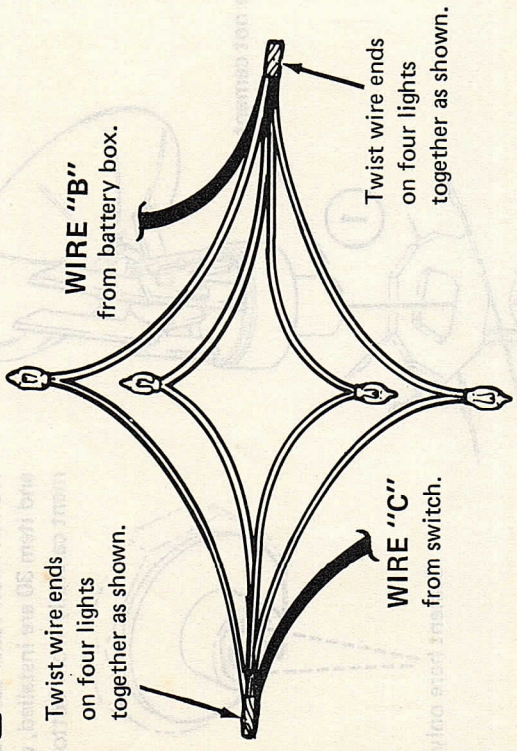


LAMP LOCATION

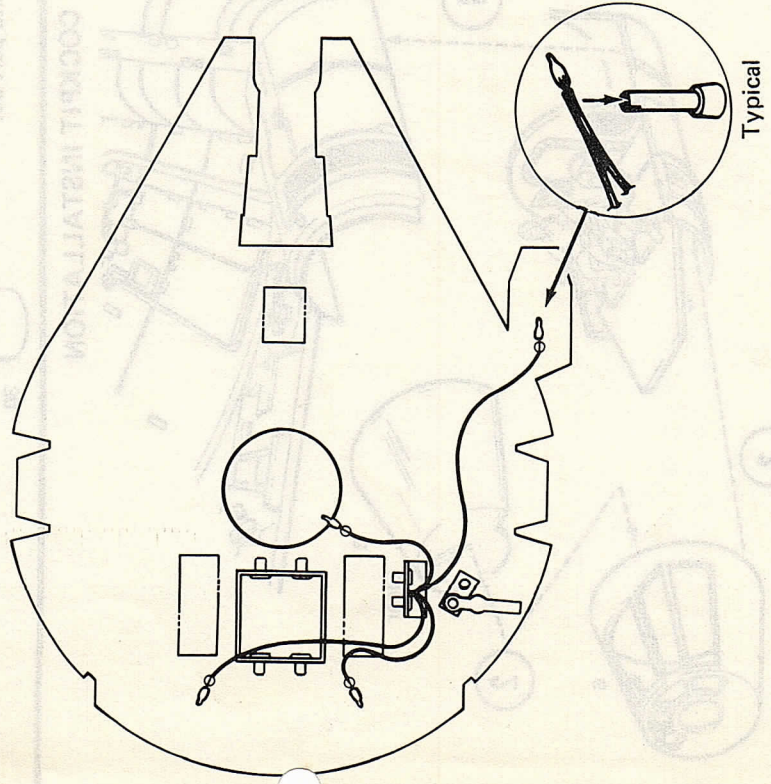

LAMP INSTALLATION

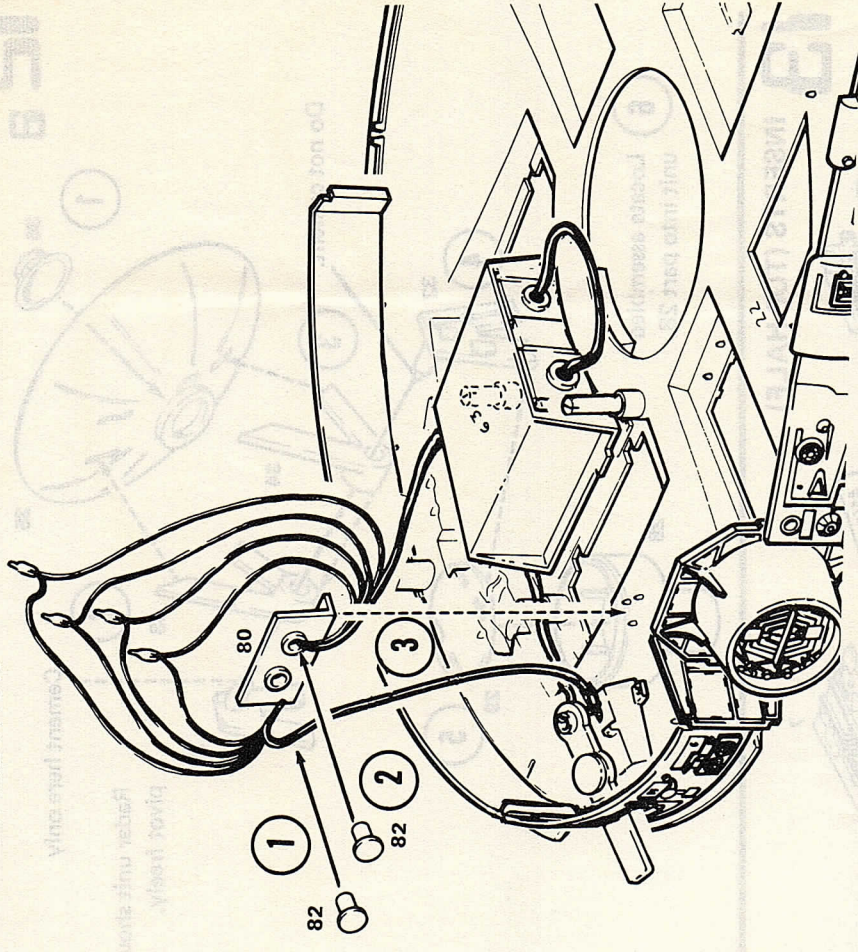


BATTERY INSTALLATION

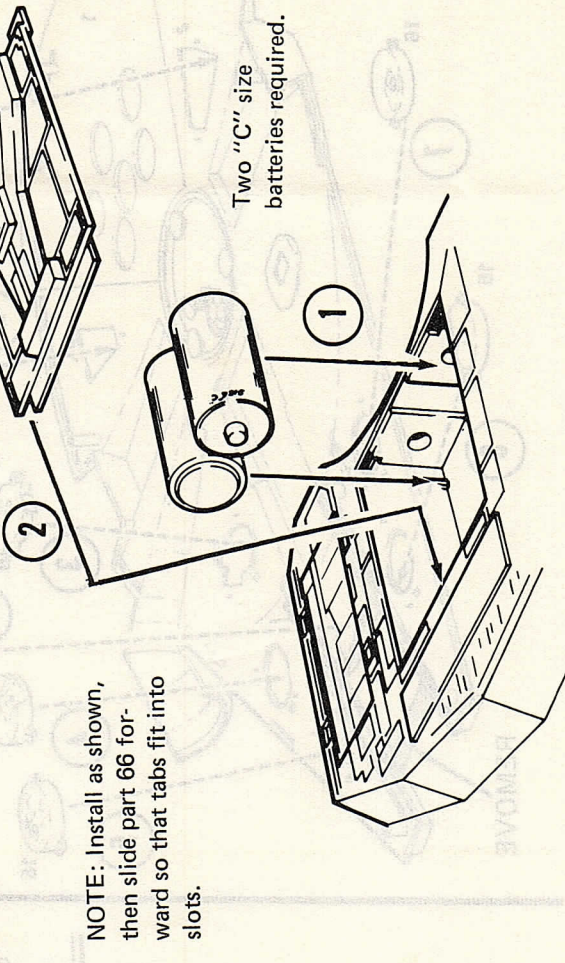

NOTE: Install as shown,
then slide part 66 for-
ward so that tabs fit into
slots.


12 a

RADAR ASSEMBLY

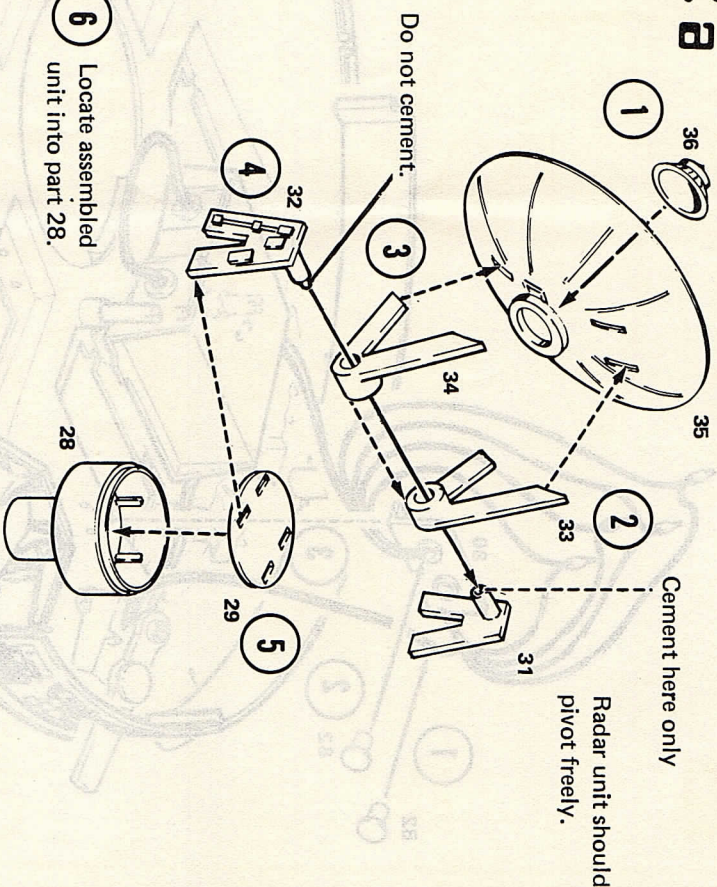

12 b


RADAR INSTALLATION

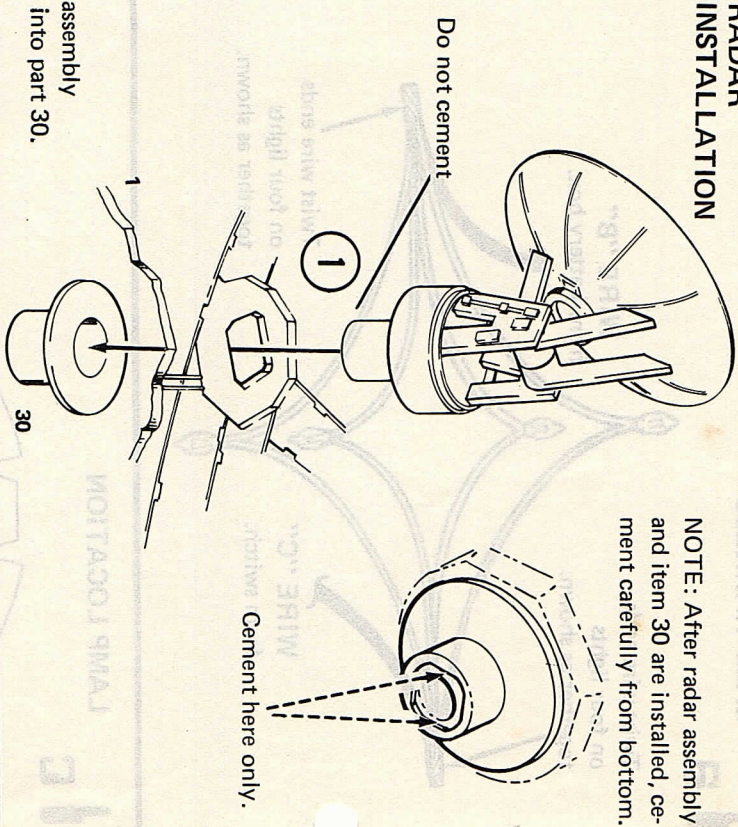

NOTE: After radar assembly and item 30 are installed, cement carefully from bottom.


13

INSERTS (TOP HALF)

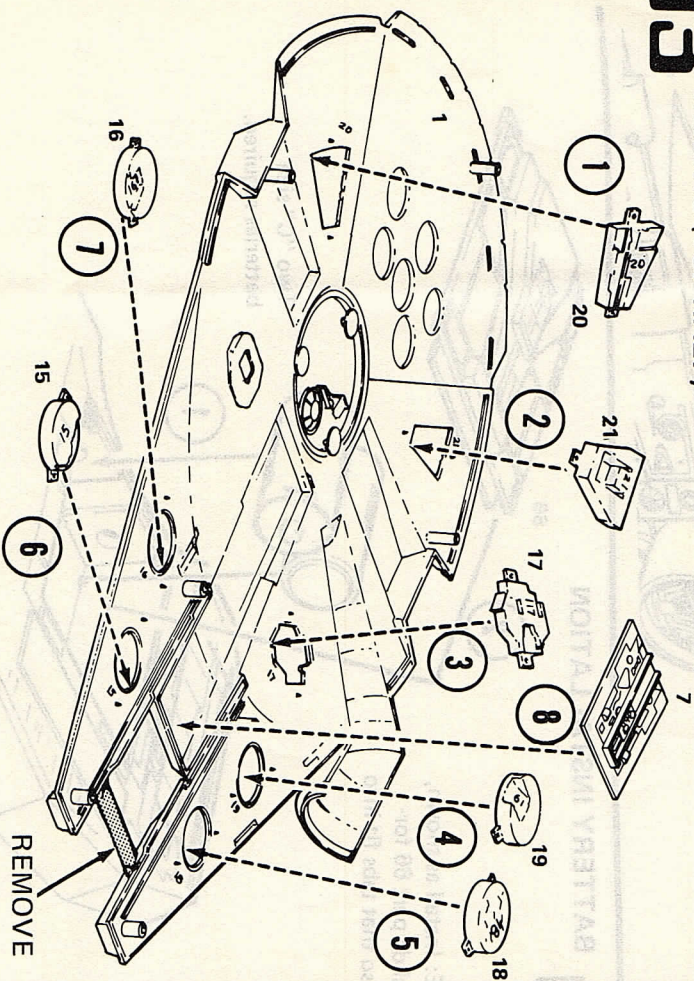


14


COCKPIT INSTALLATION

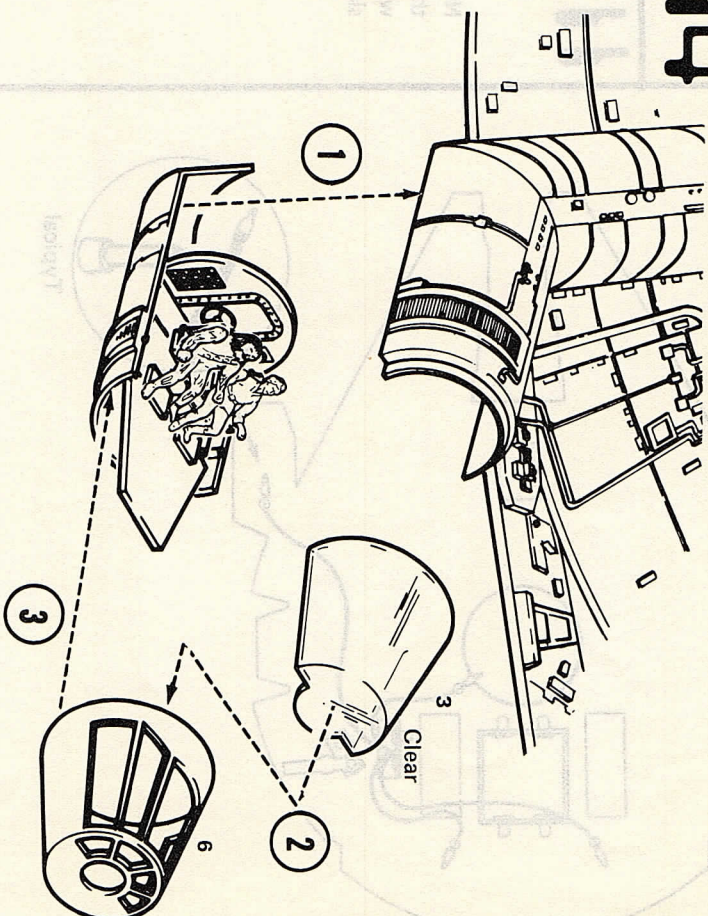


Cut out and fold reflector as shown in step 19 and insert in the rear section of the bottom half. Insert the lamps through the holes in the reflector.

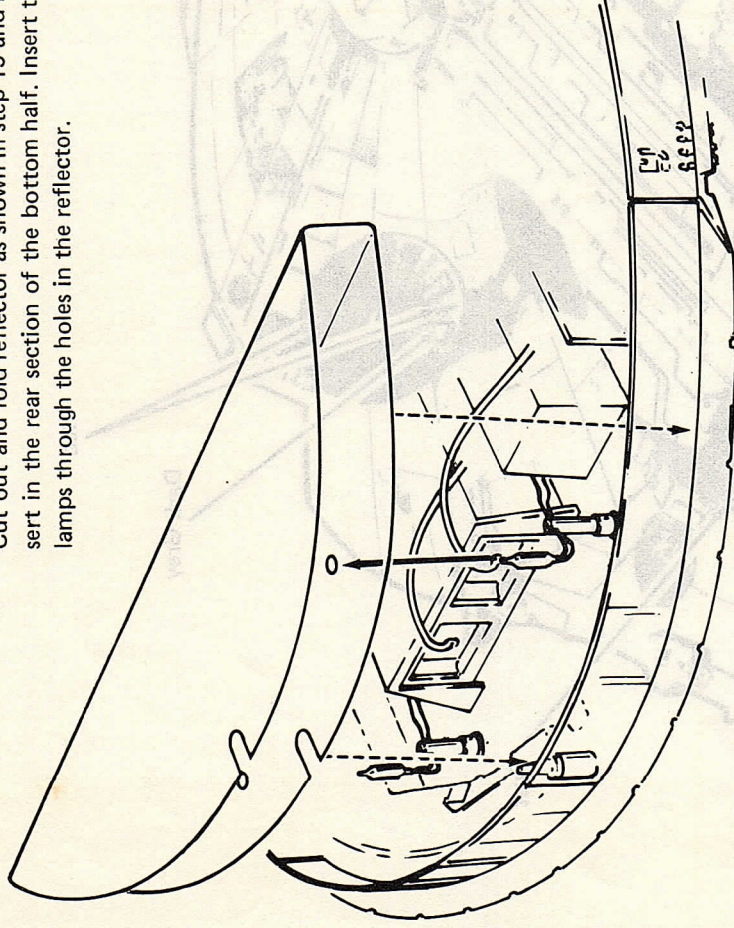

Underside of top half.

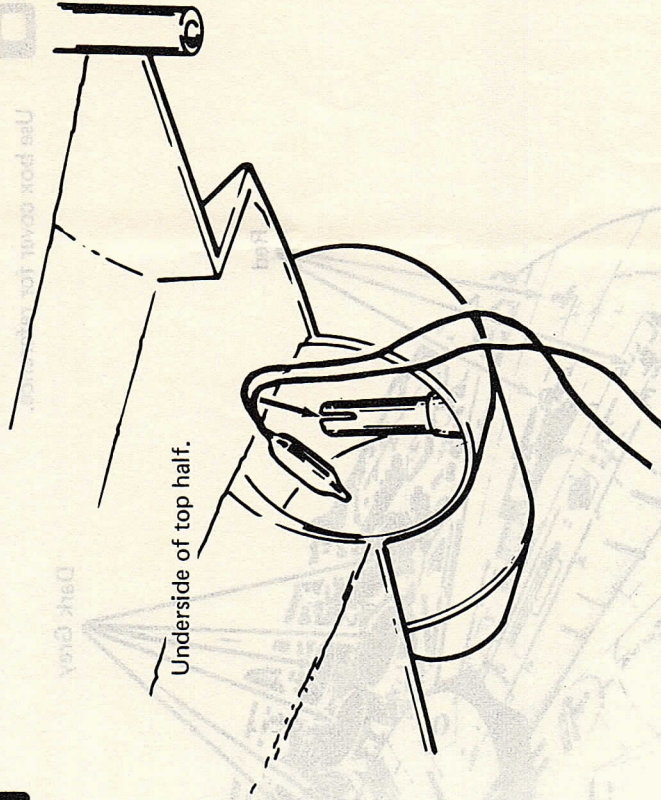


FINAL ASSEMBLY

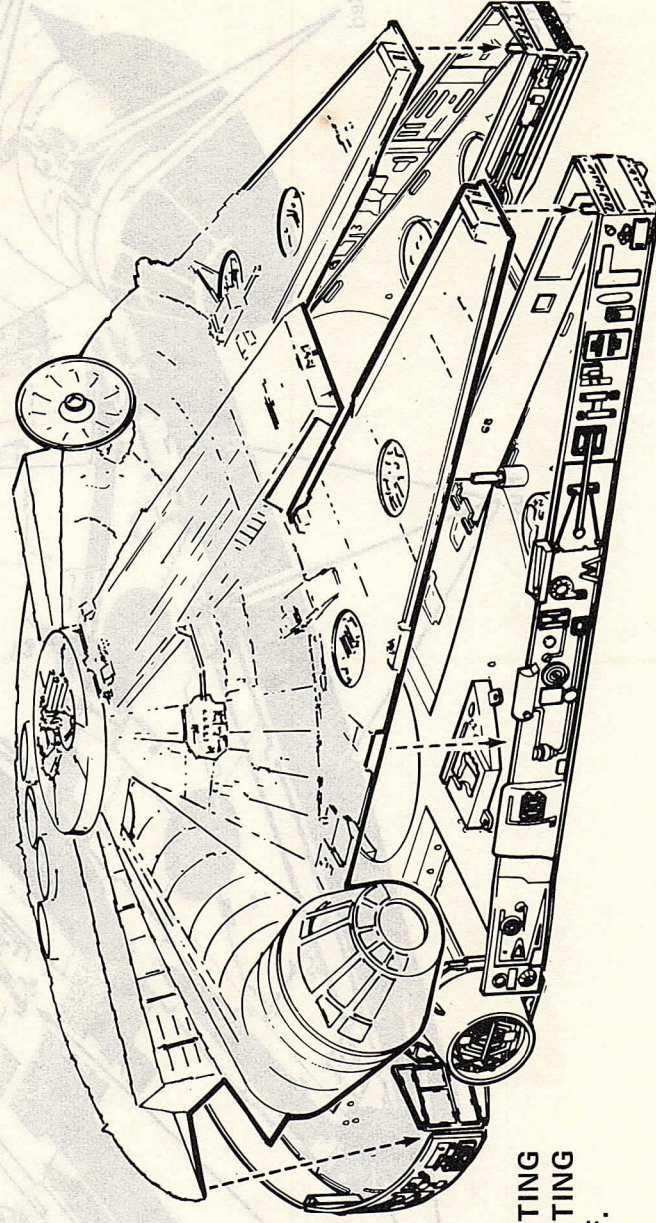

Pins to holes.



BE SURE TO TEST THE LIGHTING SYSTEM BEFORE CEMENTING TOP HALF TO BOTTOM HALF.

Use box cover for reference.

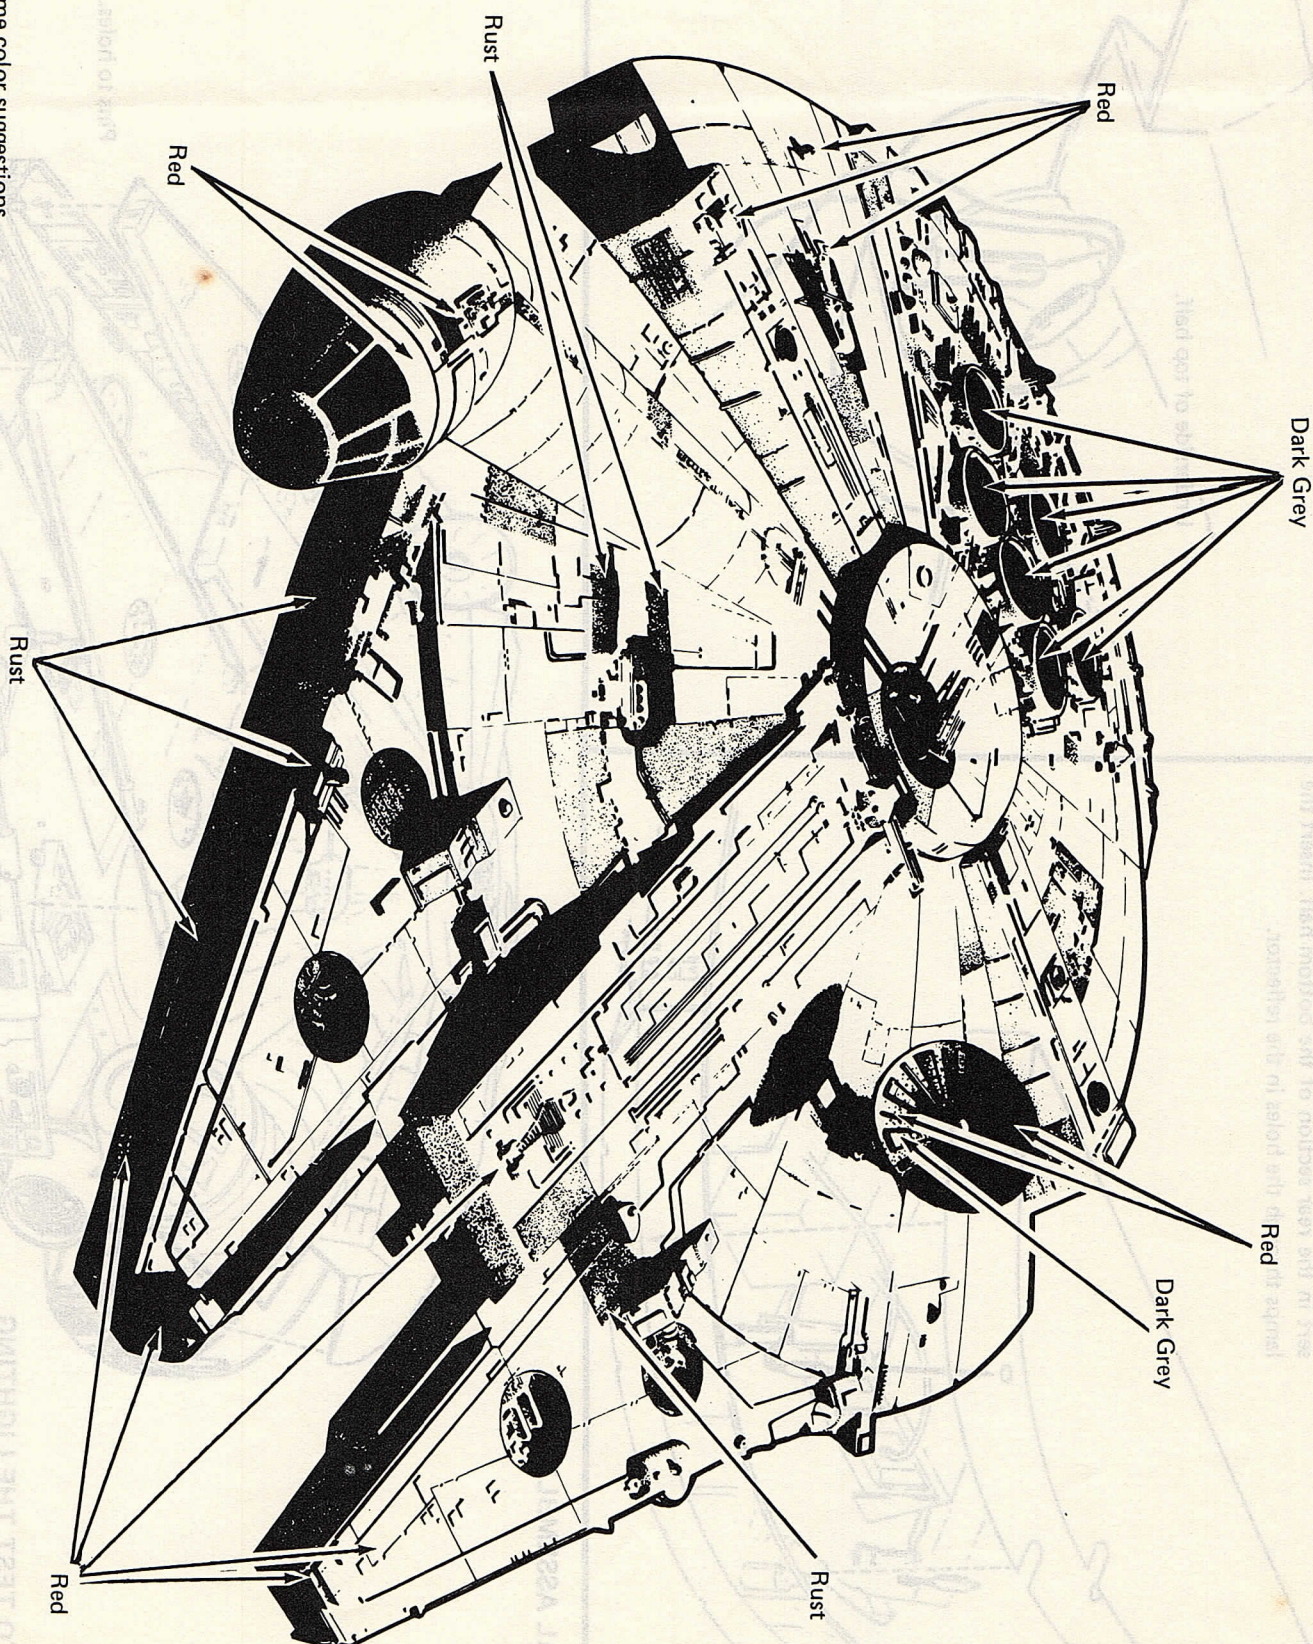



Here are some color suggestions,
you may wish to use when paint-
ing your model.

Cut out Rear Panel Reflector and openings for bulbs by following along the solid lines, then fold along the dotted lines as shown in the accompanying illustration.

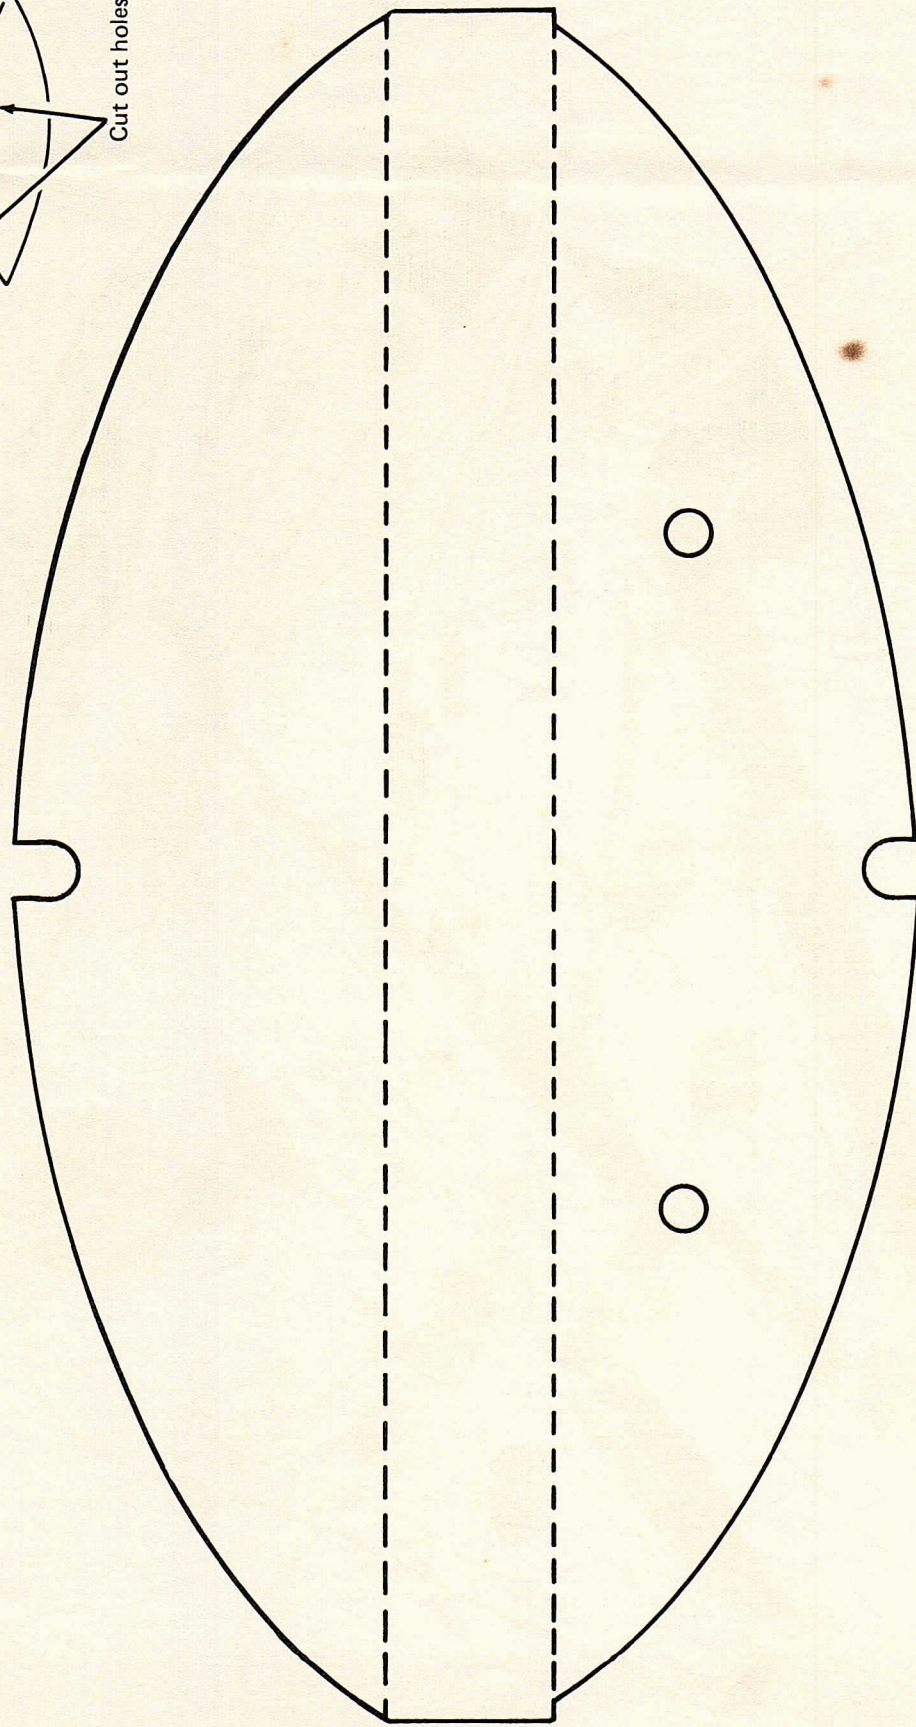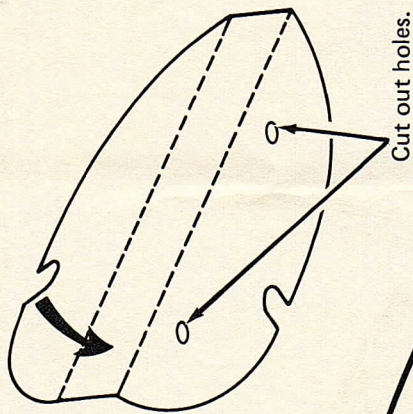

BOTTOM

bagian atas dan bagian bawah
gambaran yang menunjukkan
bagian atas dan bagian bawah
gambaran yang menunjukkan
bagian atas dan bagian bawah

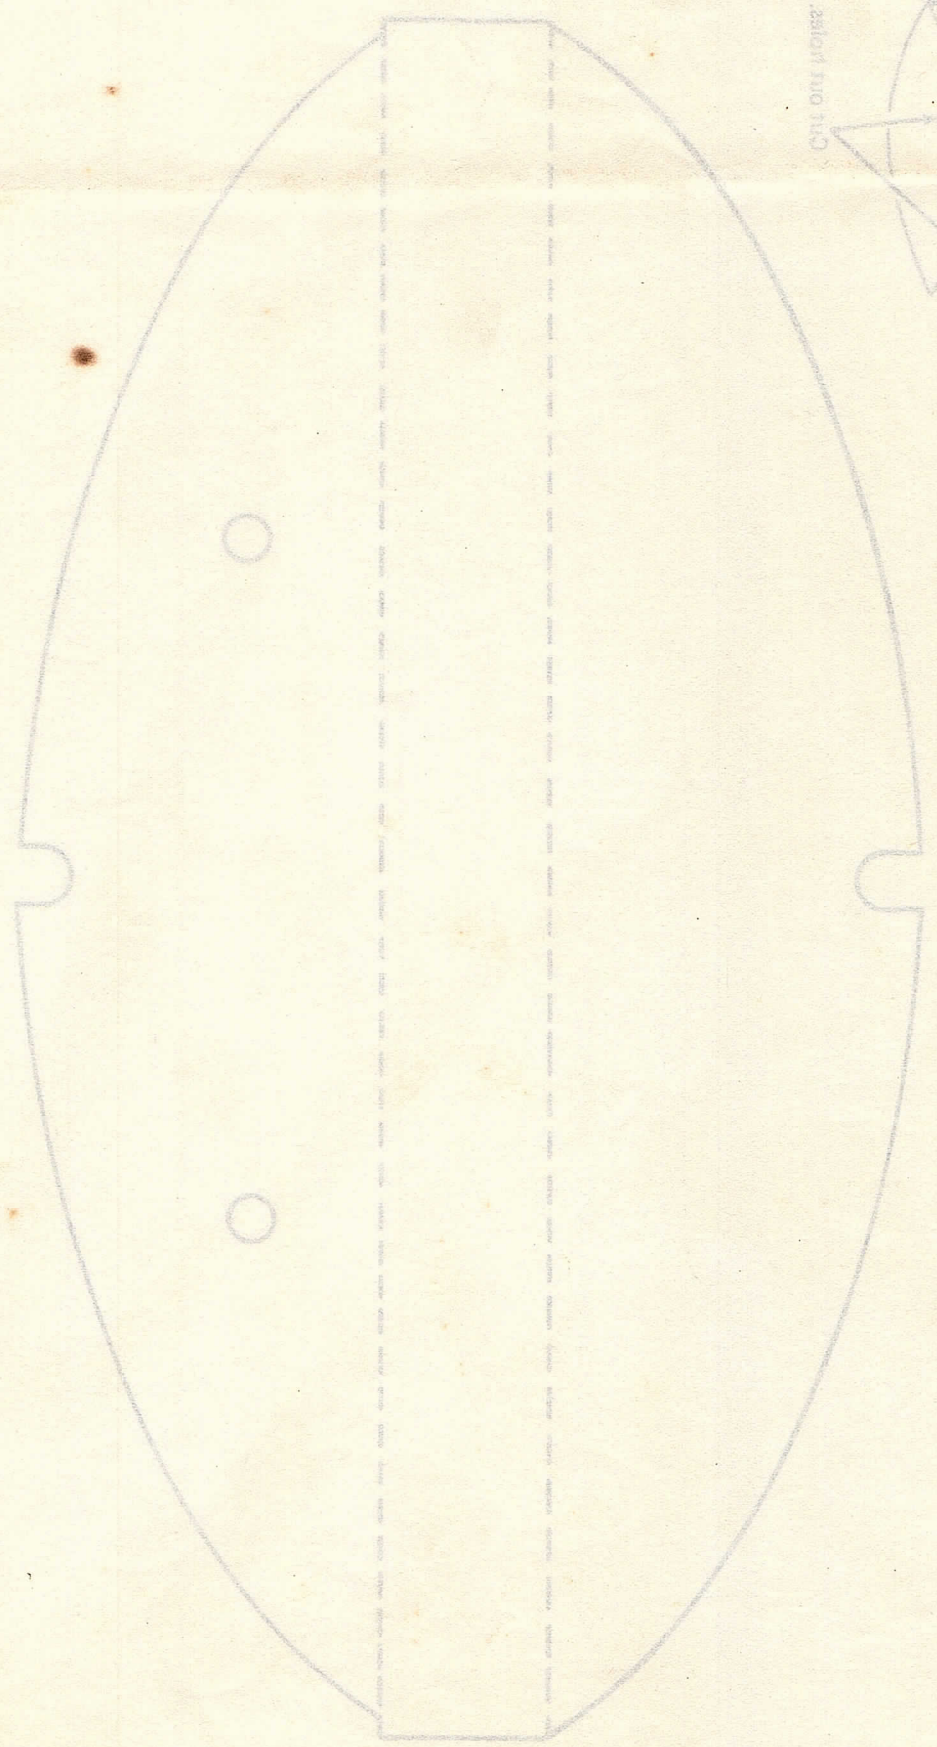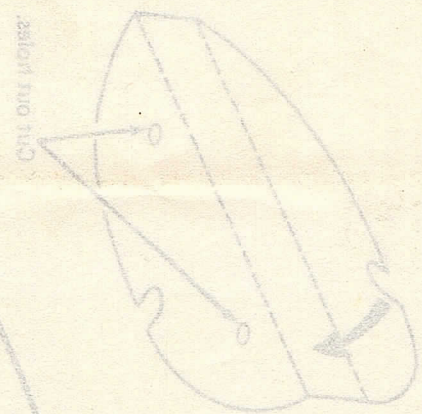

MOTTO

